



Economy Box Column (with post) Installation Instructions

Instructions


1. Measure opening height to determine overall length of Column.
2. Remove screw from base and slide base up the shaft to allow room for cutting.
3. Using measurement from Step 1 cut shaft and 4x4 post from bottom of column.
4. The column must be trimmed 3" short of the 4x4 post. (Subtract 3" from opening height to allow space between PVC material and post.) (See Detail 1) Adjust saw blade to cut 3/8" to avoid cutting the post. (The 3" difference is to allow for the attachment of "L" brackets (not included) to the bottom of post.)
5. Slide column into opening and secure post to substrate at bottom using galvanized "L" brackets (not included). Installation brackets must be installed flush on opposite sides of post, to prevent brackets from sticking out of the sides. (See Detail 1)
6. Slide base down and secure using finishing nails.
7. Remove screw from cap and slide down shaft allowing for connection to be made to load-bearing beam.
8. Connect post to load-bearing beam toe screwing from side using 3-1/2" wood screw. (See Detail 2)
19. Slide cap up into place and secure using finishing nails.
 1. The 4x4 post is mounted flush to one side of the Column to give a greater range of flexibility during installation. (See Detail 3)
 2. All holes will need to be filled with a latex caulk or exterior spackling prior to painting.
 3. Follow paint manufacturer's painting recommendations for painting the PVC column.

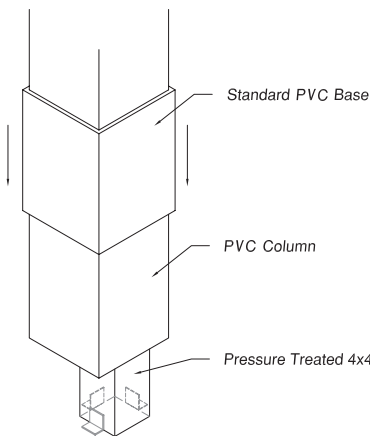

Detail 1

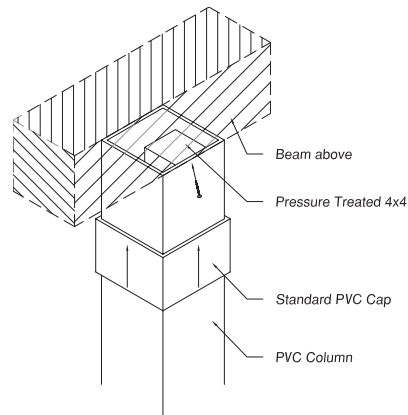

Detail 2

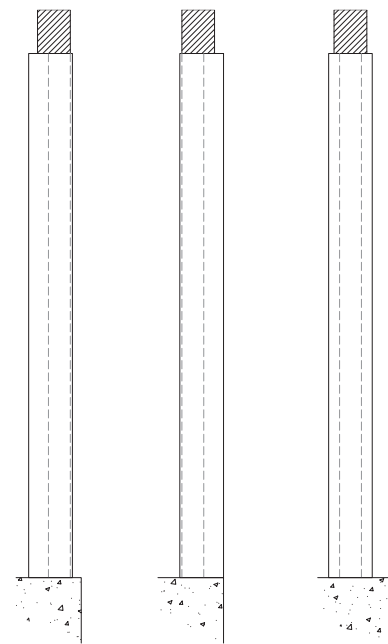

Detail 3